


Product Appearance



Product Features

- 1. UL listed.
- 2. Power optional: 4FT 24-31-38-46W
- 3. Lumen efficiency: 130lm/w.
- 4. 0-10V dimmable driver.
- 5. Input voltage: 120-277VAC .
- 6. Installation: Surface mounted // Suspension
- 7. Five years' warranty.
- 8. Customers can install microwave sensor and bluetooth by themselves.


Product Dimension

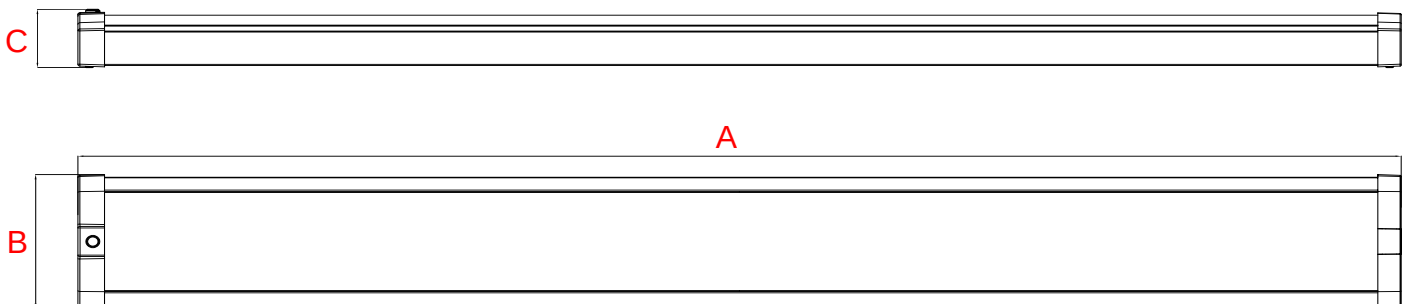

Model	size	A (inch)(mm)	B (inch)(mm)	C (inch)(mm)
WR-4FT-46W-L-H	4FT	46.98" 1193.2mm	5.37" 136.5mm	2.36" 60mm


Specification

Model	size	Power	Lnput Voltage	Dimmable	PF	Light Efficacy	Ra	CCT
WR-4FT-46W-L-H	4FT	24-31-38-46W	120-277V	0-10V	>0.9	130LM/W	80	3000-3500-4000-5000-6500K

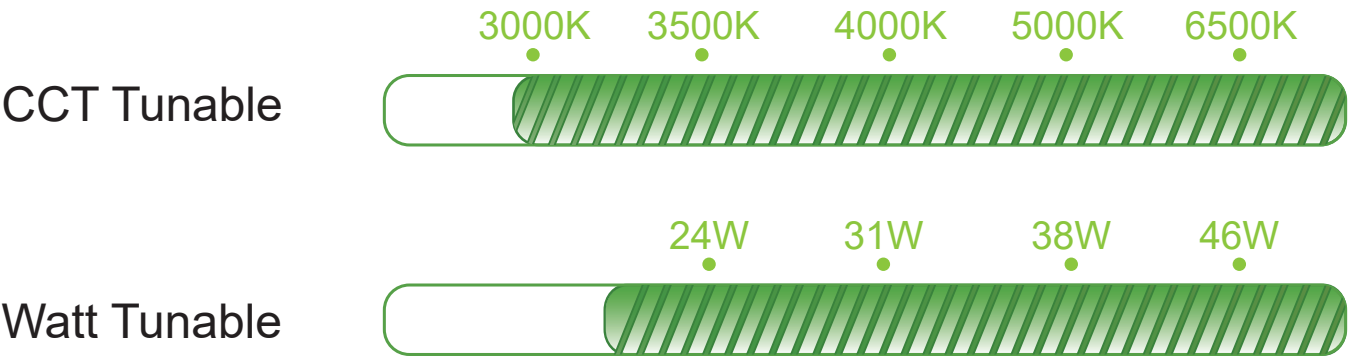


Features & Benefits


- 1. Remove the sensor dust cover from the LED lamp
- 2. Connect the certified sensor to the terminal and rotate it to fix in place
- 3. Check the installed sensor and make sure it is securely mounted.

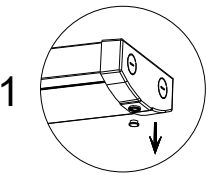


1. Remove the sensor dust cover from the LED lamp.

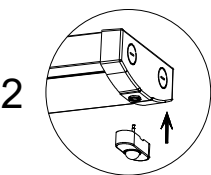

2. Connect the certified sensor to the terminal and rotate it to fix in place.

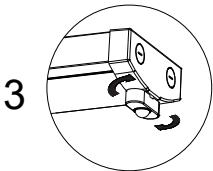

3. Check the installed sehsor and make sure it is securely mounted.

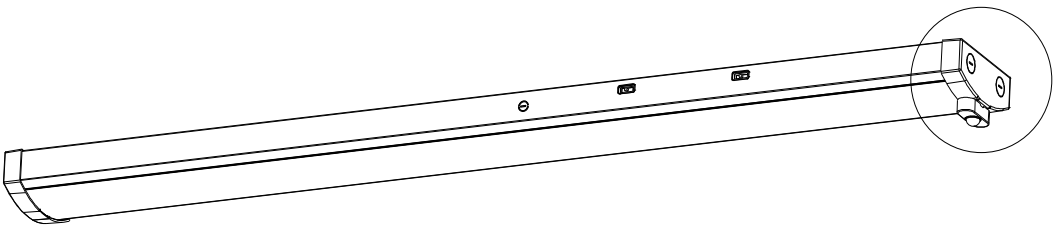

Installation

Surface mount to ceiling

NOTICE: Always turn off the power supply from main circuit breaker first!

Step 1: Flip the buckle on one end cap to remove the lens directly.

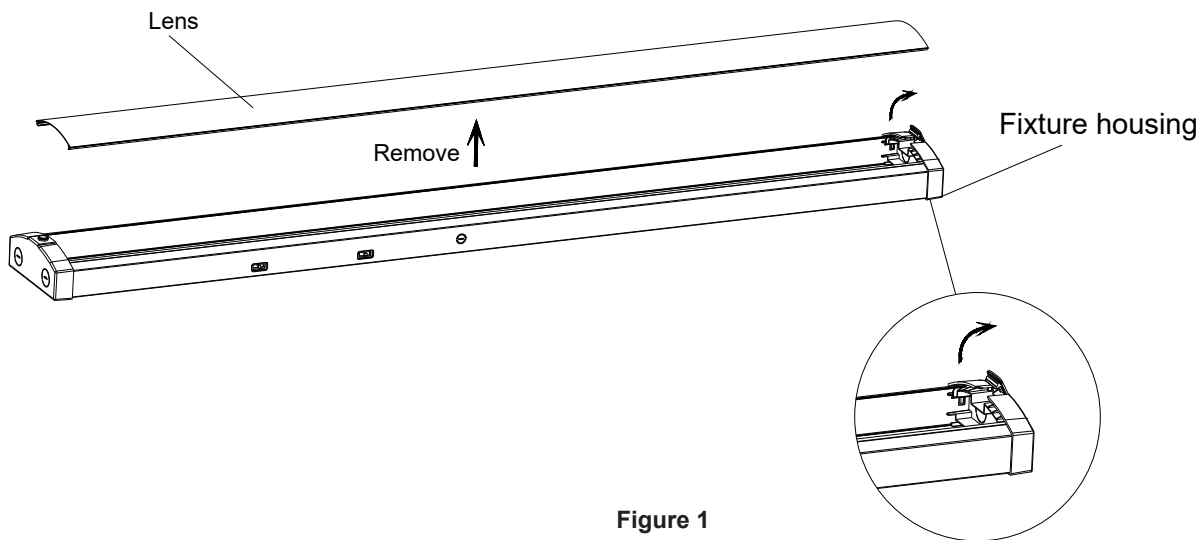


Figure 1

Step 2: Position in the mount surface and mark the screws's locations. Drill holes and install the 4 anchors.

Step 3: Make wiring refer to the General Wiring Diagram.

Step 4: Secure the fixture to the mount surface.

Step 5: Reattach the lens. Clean up fingerprints and stains. Turn on to test Light.


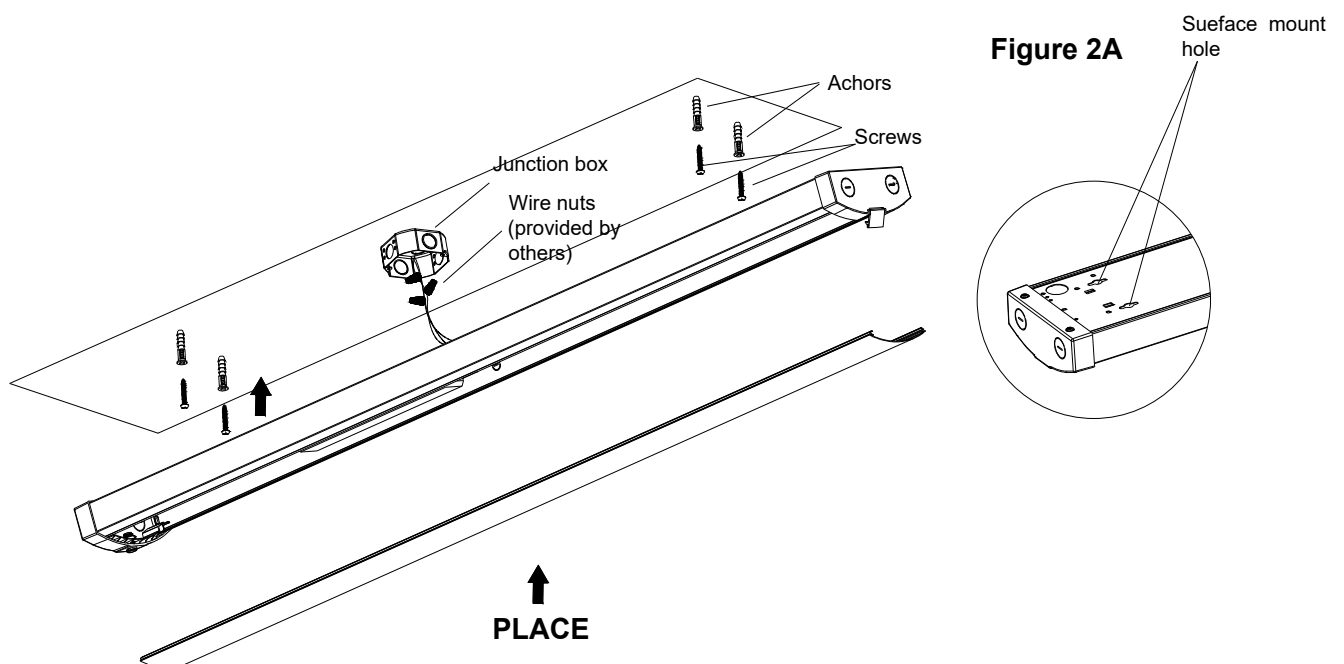


Figure 2A

Figure 2

Surface mount to junction box Junction box

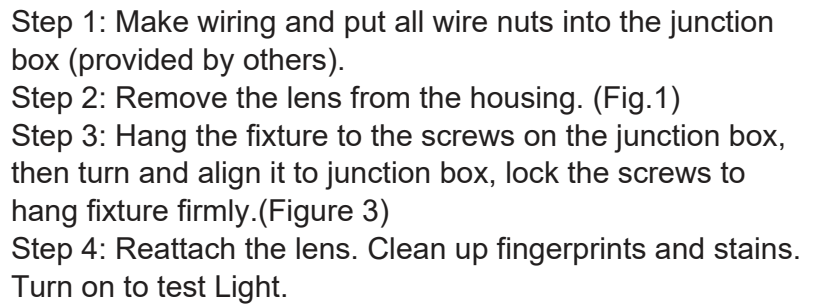

Suspended mount



Step 1: Rotate open the steel rope fixing buckle, then fix it to the ceiling with the rubber plug.
ceiling with the 1 anchors and 1 self-tapping screws. Repeat above steps to secure the other gripper wire.

Step 2: Insert the end of the steel cable into the locking buckle. Press the buckle to adjust it to the required installation height. Repeat the above steps for other hanging wires.


Step 3: Pass the hook through the mounting hole on the back of the LED lamp and connect it to the steel rope buckle.

Step 4: Connect LED driver to AC mains power.

(Note: Suspension mounting is optional, ceiling mounting is standard.)

Installation

General Wiring Diagram

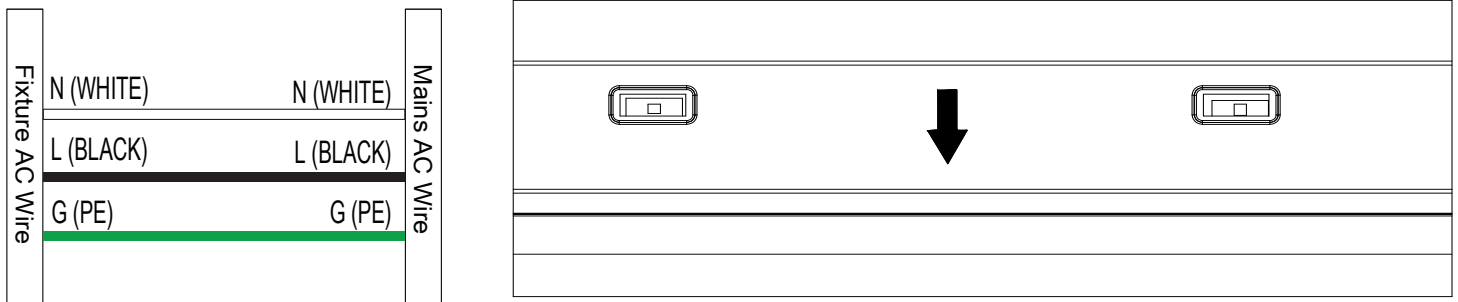

MUST connect wires with corresponding colors.


Power switch
24W-31W-38W-46W

CCT switch
3000K-3500K-4000K-5000K-6500K

EM installation and DIP switch instructions

The end users may adjust the Color Temperature and Lumen Output respectively by the 2 DIP switches. CCT switch is accommodated with 5 CCT options (3000K, 3500K, 4000K, 5000K, 6500K), and Power switch is accommodated with 4 Power options (24W, 31W, 38W, 46W). The switches can perform the desired color temperature and lumen output combination. Select a wattage and color temperature by sliding switch left or right respectively to the desired value.


(Note: LED emergency function is optional and not included in standard configuration.)

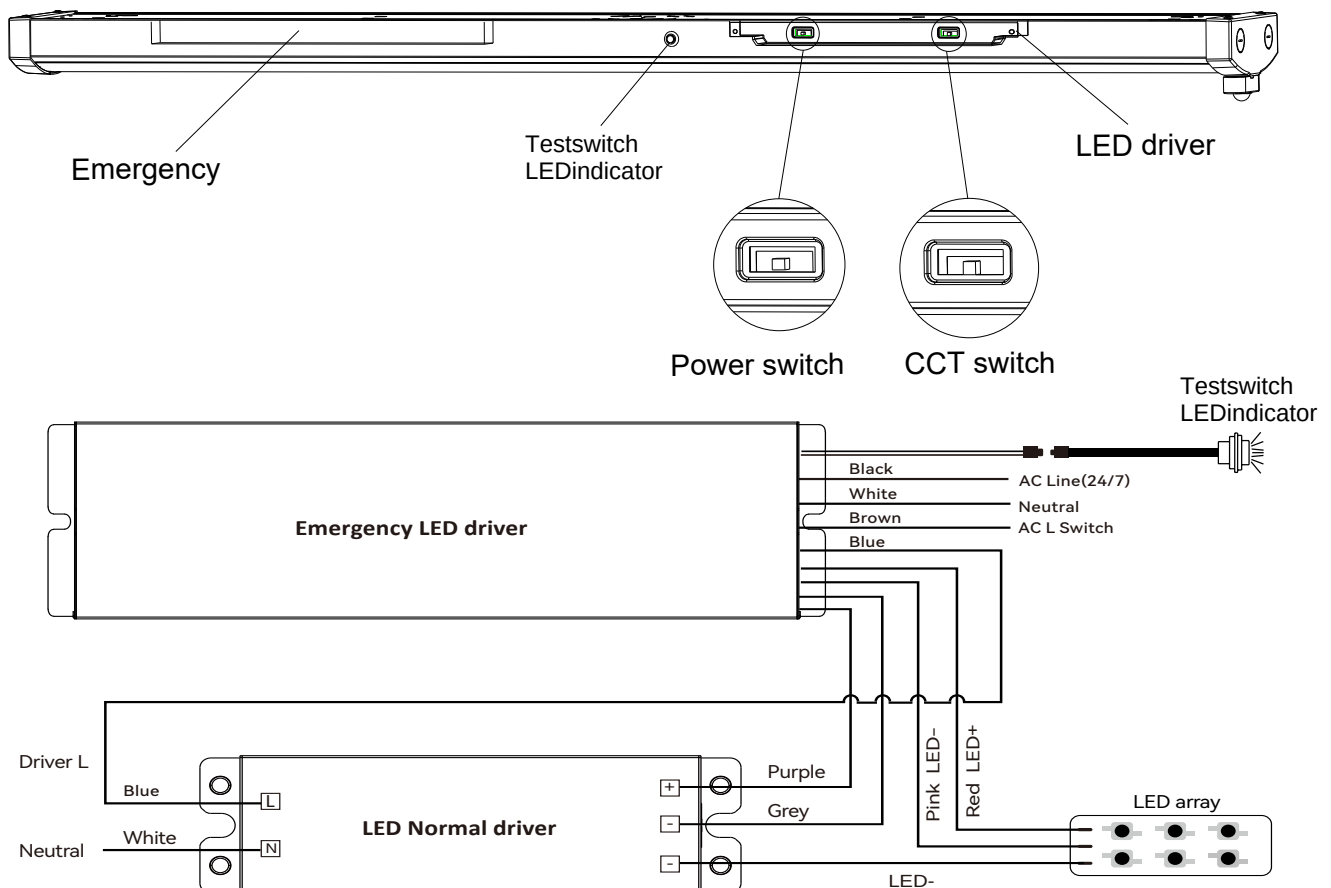

Packing/weight

Part NO.	Outer Carton Size (LxWxH)	Qty/Carton (pcs)	Net weight (kg)(lbs)	Gross weight (kg)(lbs)	20GP (QTY)	40HQ (QTY)
WR-4FT-46W-L-H	(1210x290x135mm) (47.64"x11.42"x5.31")	4PCS	1.9kg 4.19lbs	8.9kg 19.62lbs	2176	4896

Packing

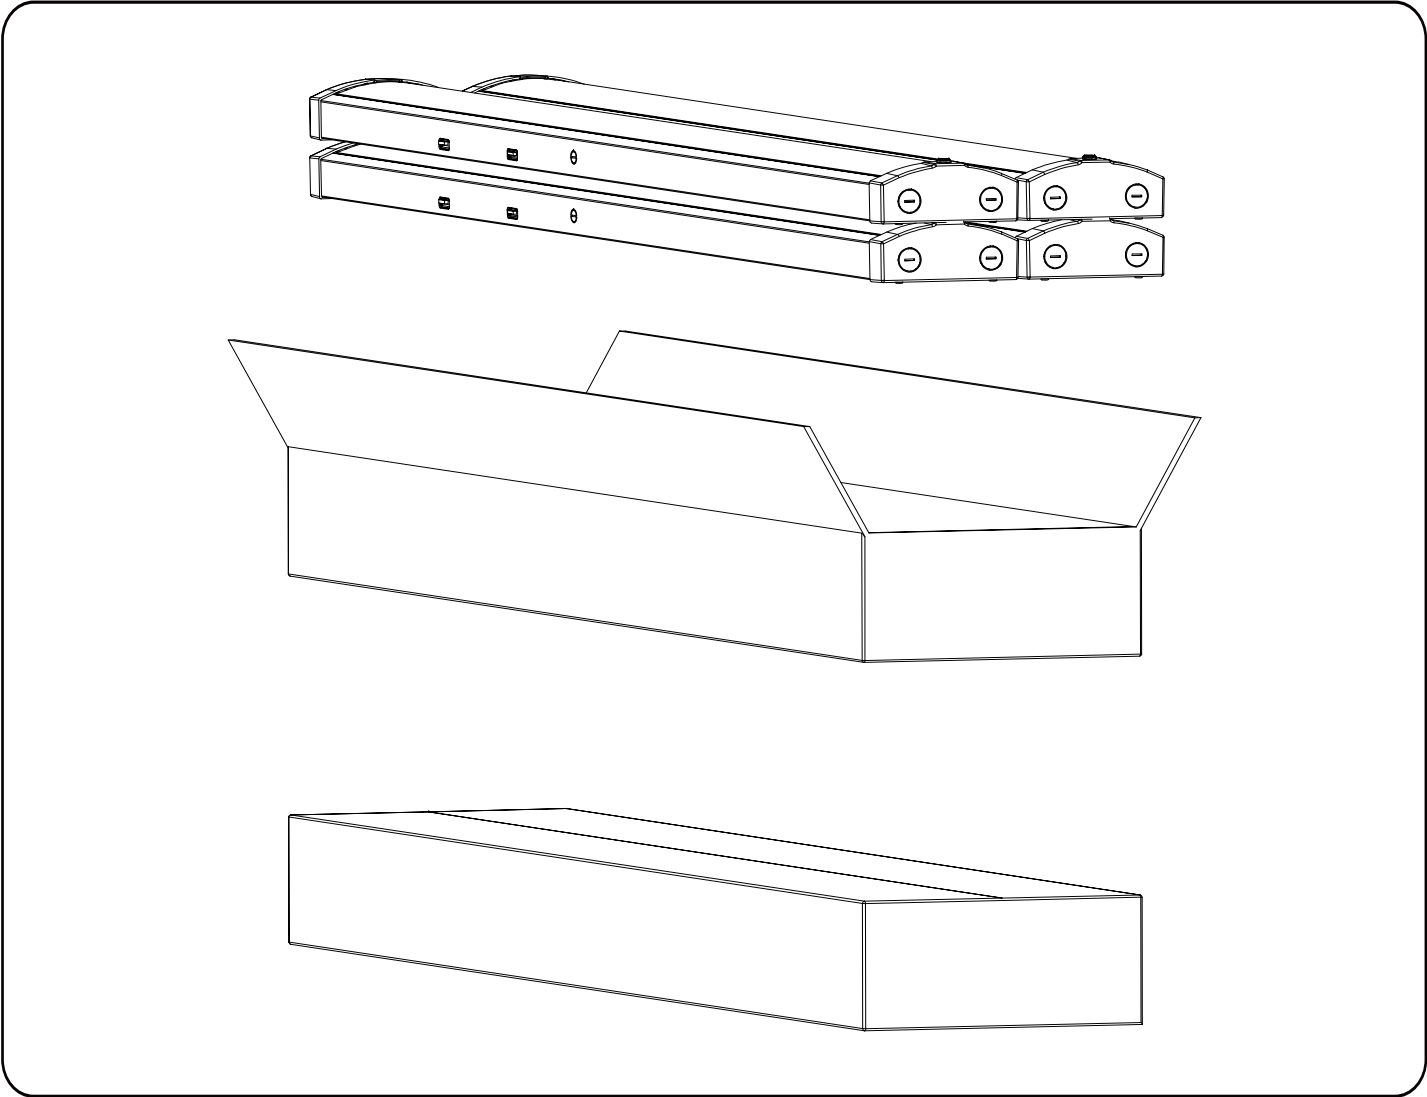



1. The installation and maintenance must be completed by electricians or professionals.
2. Please cut off the power before installation and maintenance.
3. The fixture is not allowed to be covered by thermally insulating material.
4. Please keep away from the corrosive substance, and keep the fixture dry and clean.
5. Working tempe: $-4^{\circ}\text{F}\sim 104^{\circ}\text{F}$, storage temperature: $-22^{\circ}\text{F}\sim 140^{\circ}\text{F}$.